



Metro Historic Zoning Commission




ADDITIONS DESIGN REVIEW SUPPLEMENT

PLANNING AND DESIGNING ADDITIONS




In general, the design guidelines call for additions to be no wider and no taller than the historic building and to not more than double the footprint. Foundation lines and wall heights should be similar to the historic building. In addition, the guidelines call for additions to be removable in a manner that would not harm the historic building and to be distinguished from the historic building.

Historic buildings come in a variety of forms that each dictate how an addition can be accomplished. Follows are a series of basic historic forms and common ways of accomplishing additions in a manner that meets the design guidelines. These are provided as a planning tool and are not intended to show every possible scenario.




SIDE GABLE ADDITION EXAMPLE

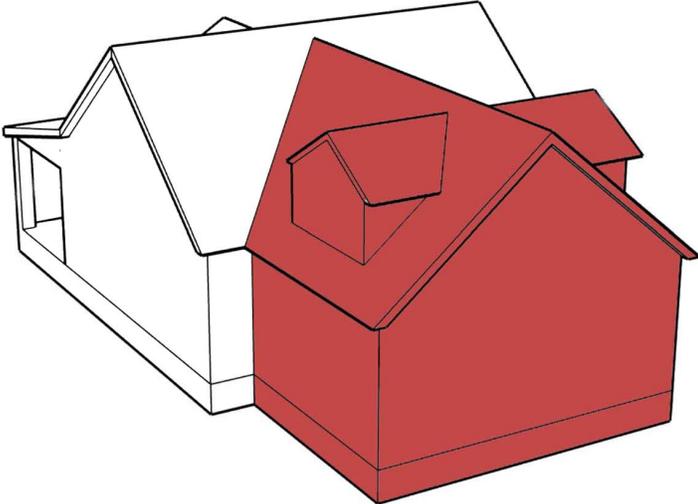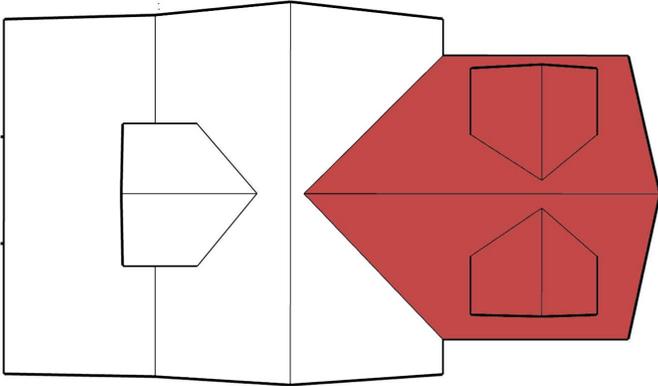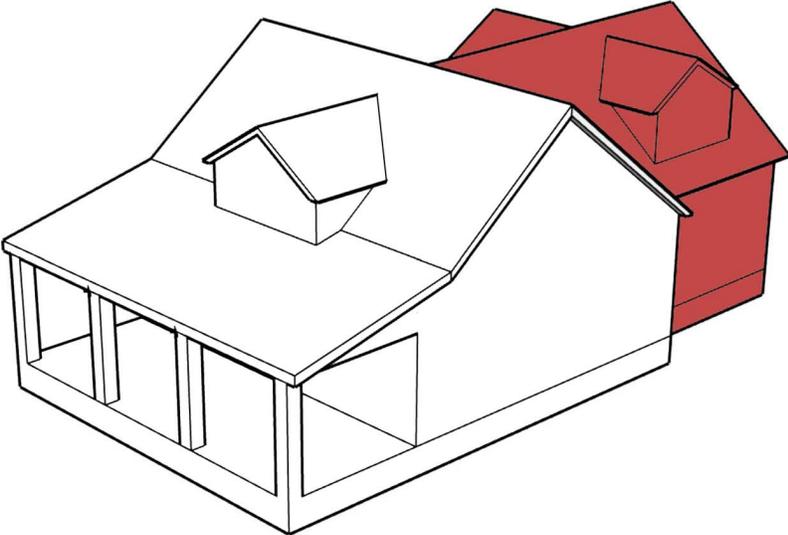




HIPPED PYRAMIDAL ADDITION EXAMPLE

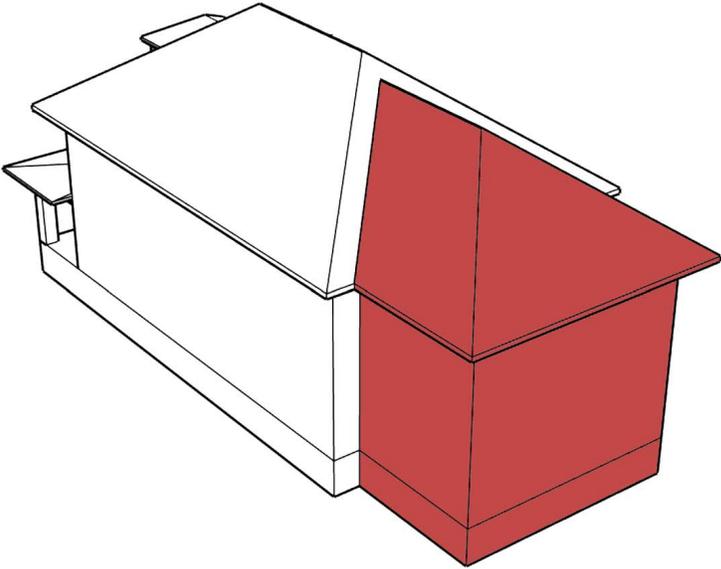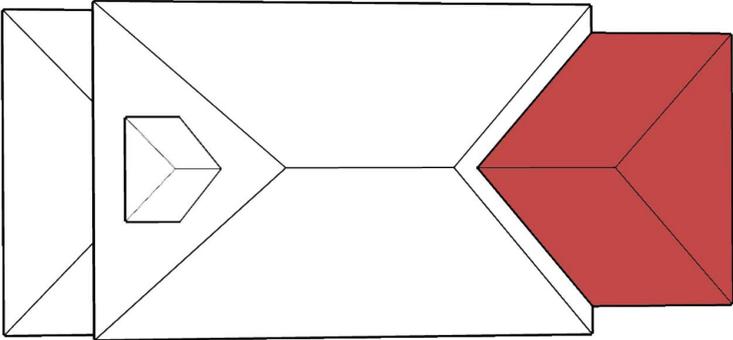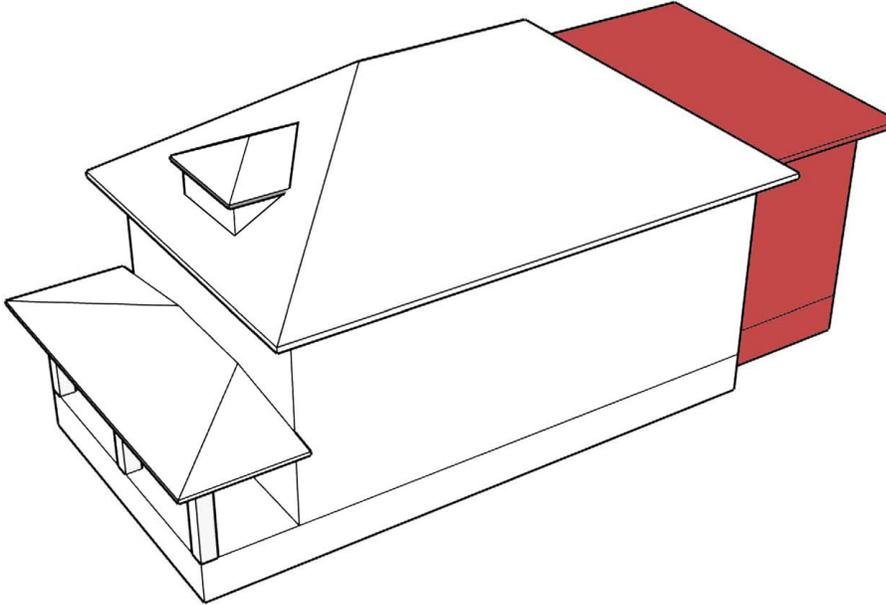




HIPPED PYRAMIDAL ADDITION EXAMPLE

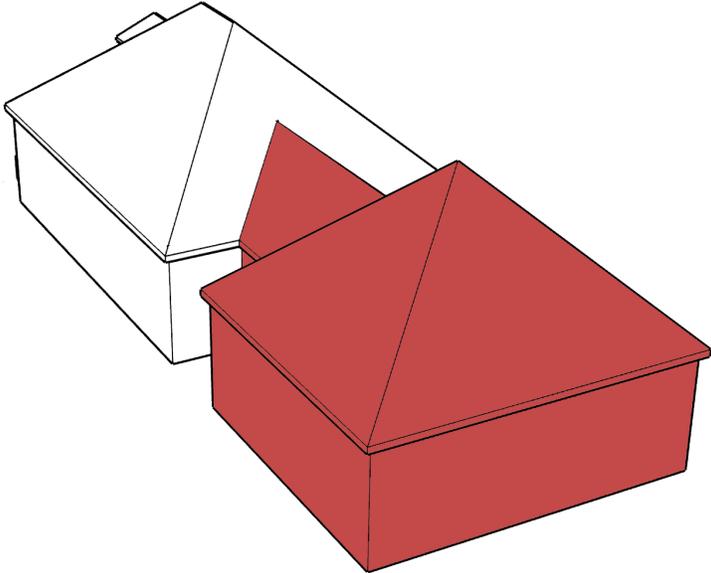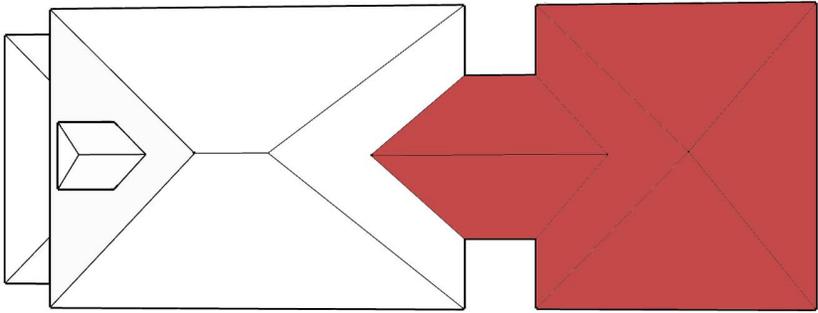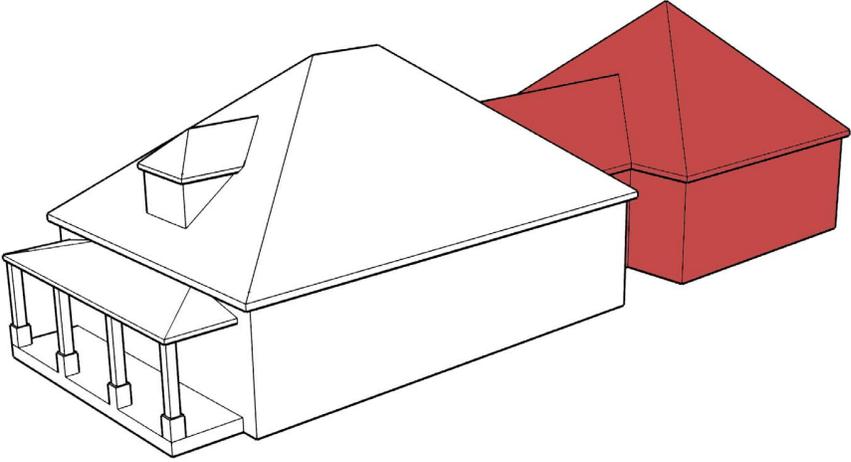

FRONT GABLE ADDITION EXAMPLE

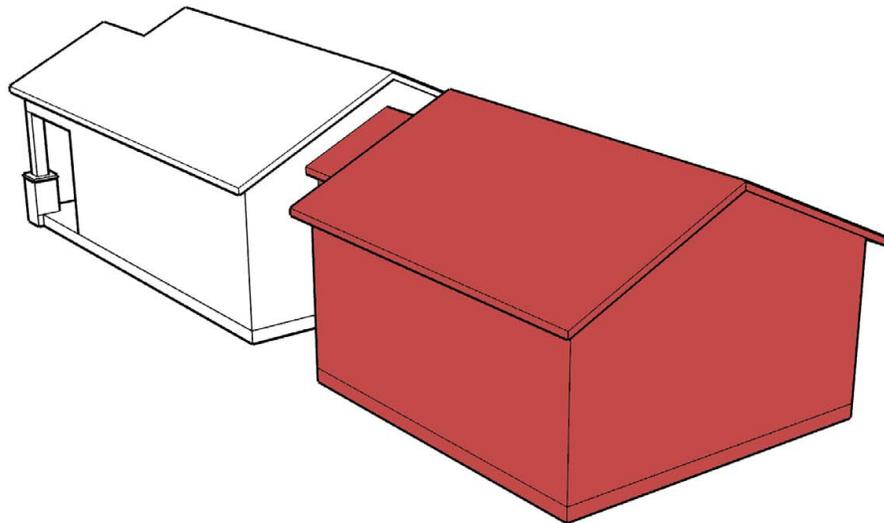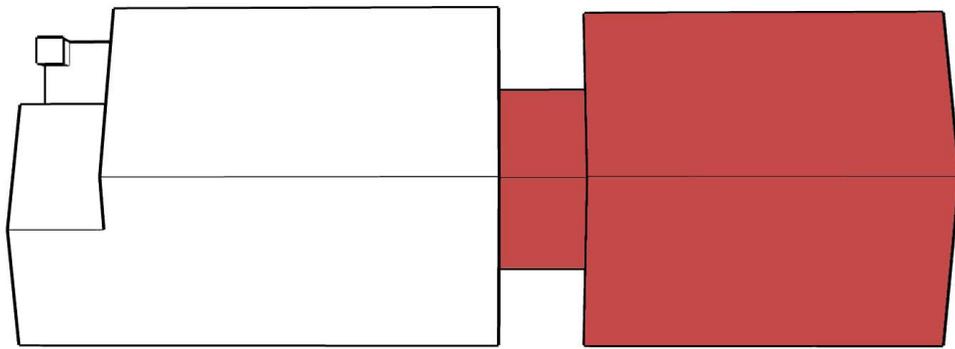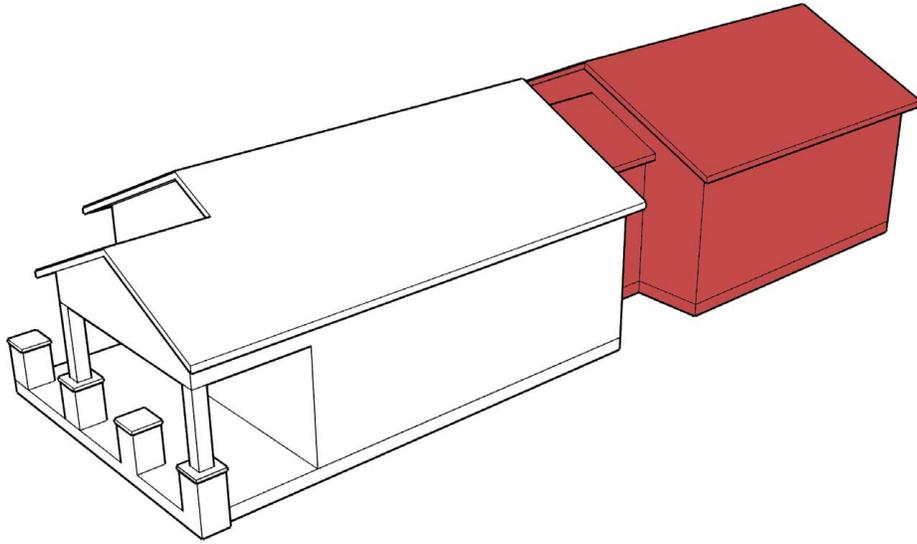

FRONT GABLE ADDITION EXAMPLE

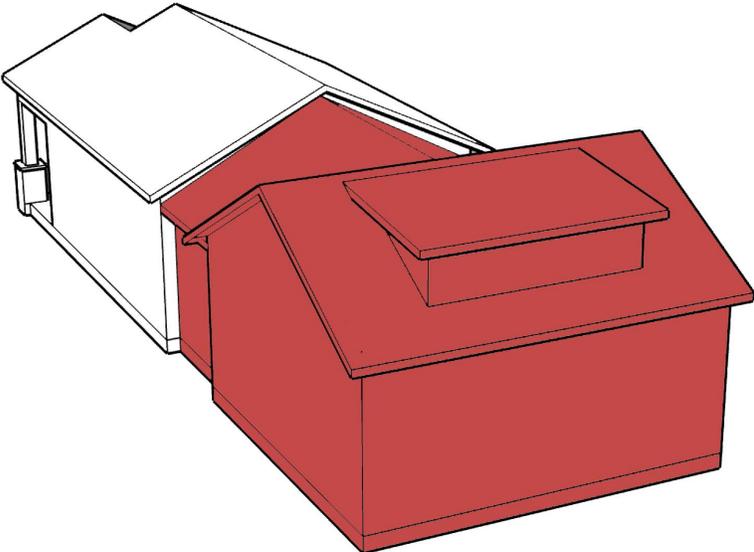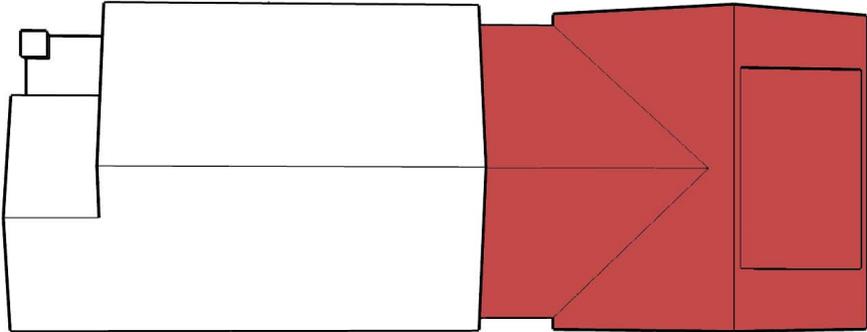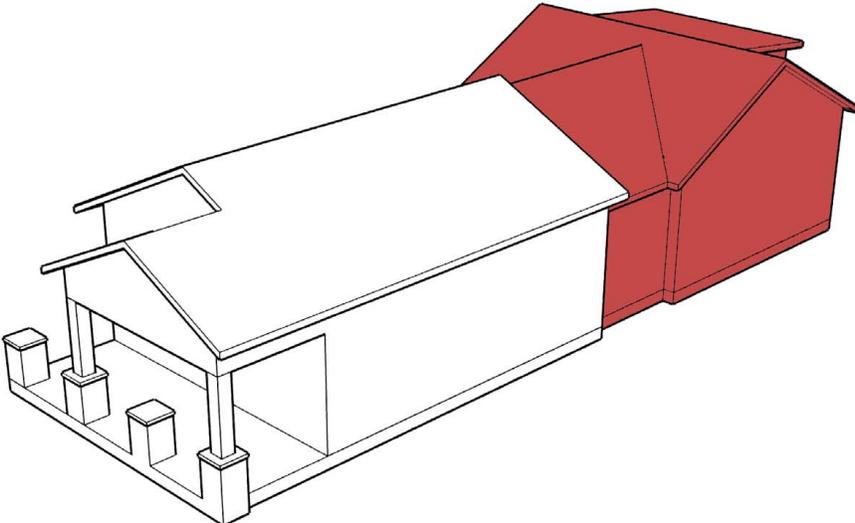

CROSS GABLE ADDITION EXAMPLE

